

ShineLan

Snelle Installatie Handleiding


For more info, please download the user manual from <http://server.growatt.com>

T +86 755 2747 1942 F +86 755 2747 2131

E info@ginverter.com W www.growatt.com

Stap1. Get the Serial Number and Check Code

Er zit een serienummer en een check code op de buiten kant van de doos, en op het product.
Noteer deze om ze later te gebruiken in stap 3.

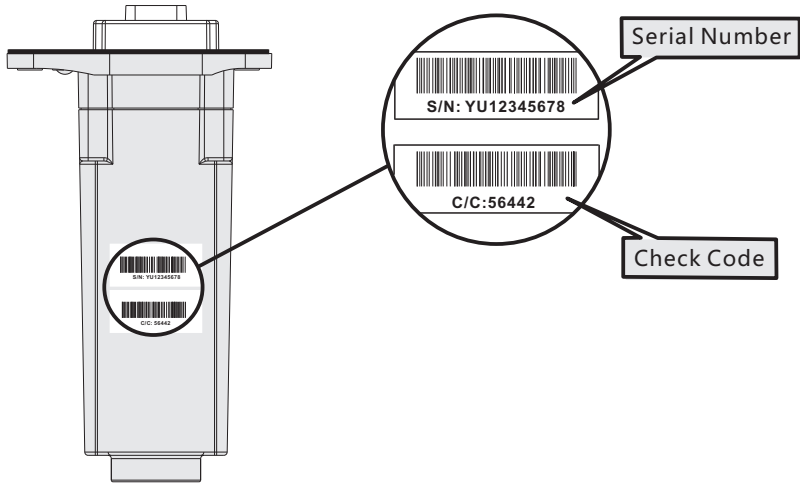

Stap 2. Electricitietsverbinding


Haal de waterbestendige kap van de RS-232 port af.

Als de RS-232 port er uit zit zoals in de eerste specificatie (1), zet dan de DIP schakelaar aan. Doe daarna de ShineLan in de omvormer via de RS-232 port en schroef hem vast.

Als de RS-232 port er uit ziet zoals in de tweede specificatie (2), druk dan op de waterbestendige rubberen knop. Doe daarna de ShineLan in de omvormer via de RS-232 port en schroef hem vast.
After that, Please connect the ShineLan to a router via cable.

Note: The router must be enabled DHCP service!

If you don't understand DHCP, please restore your router to factory settings.

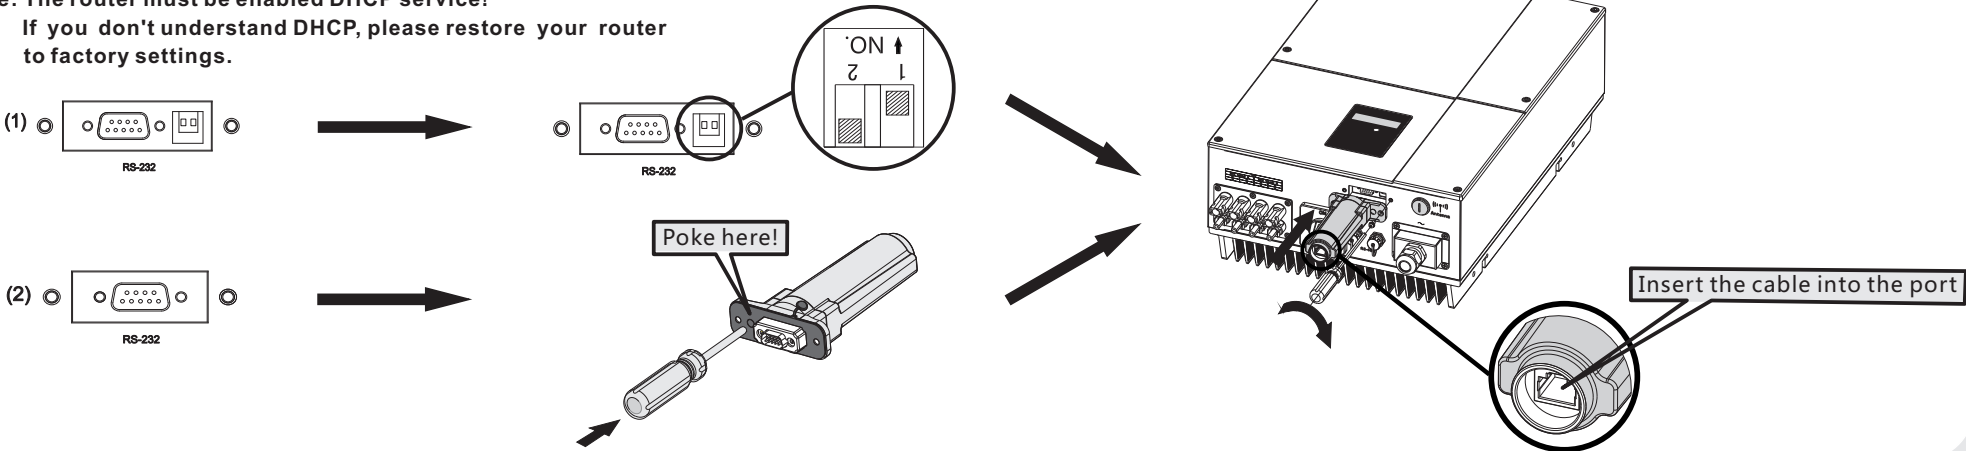

Stap 3. Registration

3.1 Registreer een Account

Ga naar: <http://server.growatt.com>

Vul de juiste informatie in.

! In het vak 'Data Logger SN' en 'Data Logger verification code' in het plaatje hieronder zijn het serienummer en de check code uit stap 1.

Register

User name *

Password *

Password repeat *

Email *

Data Logger SN *

Data Logger verification code *

Time zone *

Language *

Validate code *

☒ I have read and agree <ShineServer terms of use>

Input the Serial Number of the ShineLan

Input the Check Code of the ShineLan

3.2 Creating New Plant

A. Login met uw aangemaakte gegevens en creëer een nieuw 'plant.'

+ New plant

Plant name

B.Voeg de benodigde informatie voor uw situatie toe en click op save

New plant

1.Set installation info

Plant name: My plant

Installation date: 2012-11-22

System power(KW): 35

2.Set location

Country: China

City: Beijing

Time zone: GMT +8

3.Set income formula(Set 1kwh as the conversion standard)

Capital income: 1.20

Standard coal saved (kg): 0.400

CO₂ emission reduce (kg): 0.997

SO₂ emission reduce (kg): 0.030

4.Set plant profile

Images of plant: Browse...

5.Select data logger

Unselect: YU12345678

Selected: Move the ShineLan to the right box

Save

3.3 Voeg de ShineLan toe

Note: If you have only one ShineLan, the step is not need.

Click op 'setting' 'Device Management' 'Data Logger' 'Add'

a.Voeg het serienummer en check code toe van de ShineLan

b.Selecteer uw 'plant' en click op save.

Setting

► User manage

► Plant management

▼ Device management

►► Data logger

Inverter

Data logger list

+ Add

No.	SN	Alias	Type
1	YU12345678	YU12345678	ShineLan

Data logger registration

Data logger SN: *

Data logger security code: *

Plant for the data logger: *

Save Cancel

Input the Serial Number of another ShineLan

Input the Check Code of another ShineLan

ShineLan

Quick Installation Guideline


For more info, please download the user manual from <http://server.growatt.com>

T +86 755 2747 1942 F +86 755 2747 2131

E info@ginverter.com W www.growatt.com

Step1. Get the Serial Number and Check Code

There are Serial Number and Check Code on the outer casing and packing box of the ShineLan. Please write them down for Step 3 to use.

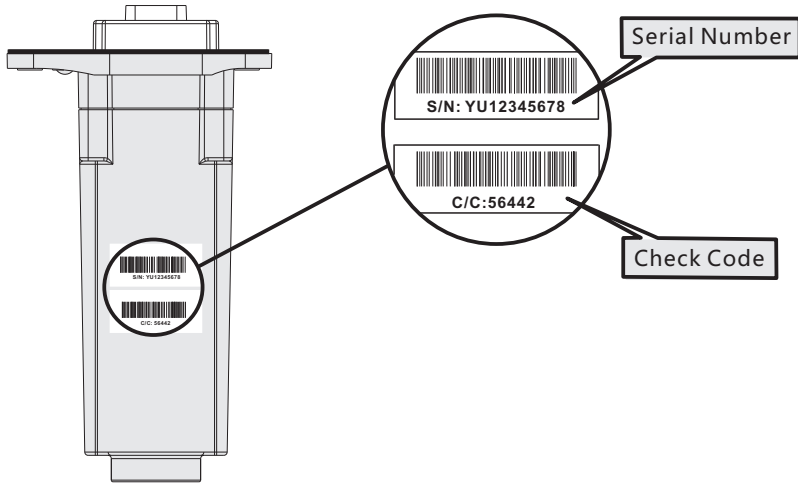

Step 2. Electrical Connection

Take the waterproof plate down from RS-232 port on inverter.


If the RS-232 port is compliant with the specification (1), please turn on the DIP switch, then plug the ShineLan to the inverter directly via the RS-232 and lock screws.

If the RS-232 port is compliant with the specification (2), please poke the rubber plug in the waterproof cushion, then plug the ShineLan to the inverter and lock screws.

After that, Please connect the ShineLan to a router via cable.

Note: The router must be enabled DHCP service!

If you don't understand DHCP, please restore your router to factory settings.

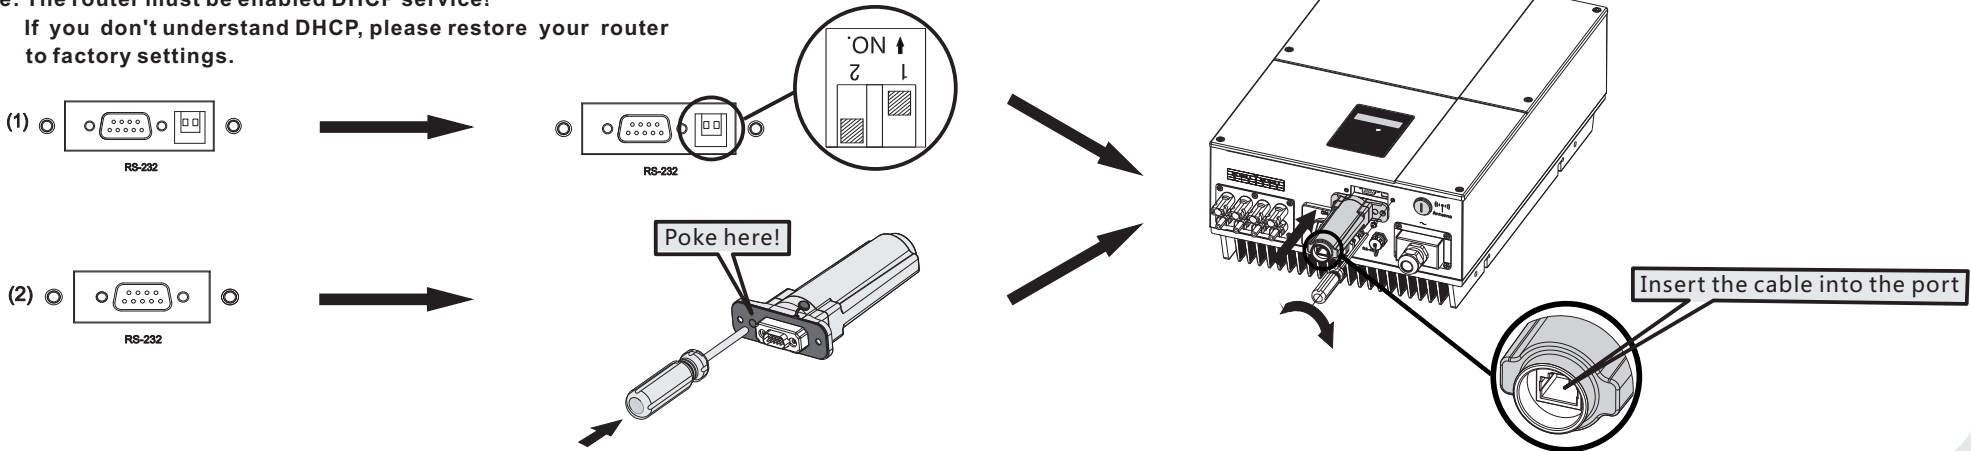

Step 3. Registration

3.1 Register Account

Web browser: <http://server.growatt.com>

Fill in the required information according to prompt.

Note: The field “Data Logger SN” and “Data Logger verification code” in the below table are just the Serial Number and the Check Code you go from Step 1.

Register	
User name	*
Password	*
Password repeat	*
Email	*
Data Logger SN	*
Data Logger verification code	*
Time zone	*
Language	*
Validate code	UTXV
☒ I have read and agree <ShineServer terms of use>	

Input the Serial Number of the ShineLan

Input the Check Code of the ShineLan

3.2 Creating New Plant

A. Login the ShineServer, and click on “New Plant” at main page to create a plant.

+ New plant	
Plant name	

B. Enter the plant information → Save

New plant	
1.Set installation info	
Plant name:	My plant
Installation date:	2012-11-22
System power(KW):	35
2.Set location	
Country:	China
City:	Beijing
Time zone:	GMT +8
3.Set income formula(Set 1kwh as the conversion standard)	
Capital income:	1.20
Standard coal saved (kg):	0.400
CO ₂ emission reduce (kg):	0.997
SO ₂ emission reduce (kg):	0.030
4.Set plant profile	
Images of plant:	Browse...
5.Select data logger	
Unselect	Selected
YU12345678	Move the ShineLan to the right box
Save	

3.3 Adding ShineLan

Note: If you have only one ShineLan, the step is not need.

Click on “Setting” → “Device Management” → “Data logger” → “Add”

→ Enter the serial number and check code of the ShineLan

→ Select the owned plant → “Save”.

Setting	
► User manage	
► Plant management	
▼ Device management	
►► Data logger	
Inverter	

Data logger list				
No.	SN	Alias	Type	
1	YU12345678	YU12345678	ShineLan	

+ Add

Data logger registration	
Data logger SN:	*
Data logger security code:	*
Plant for the data logger:	
Save Cancel	

Input the Serial Number of another ShineLan

Input the Check Code of another ShineLan